DW Panel Assembly Instructions

DW-31-30F / DW-31-60F / DW-31-45F / DW-31-60FH

DW-31-90F / DW-31-105F V.8-19

scan QR code

IMPORTANT SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS: DW PANEL

WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this unit is used by, or near children, invalids, or disabled persons.
2. Use this unit only for its intended use as described in this manual.
   Do not use attachments not recommended by the manufacturer.
3. Never drop or insert any object into any opening other then the intended use of presenting sunglasses.

MAINTENANCE INSTRUCTIONS - Instructions for cleaning and user maintenance operations:

1. The exterior of a SECURE DISPLAY SYSTEM may only be cleaned with a non-static brush.
2. The SECURE DISPLAY SYSTEM has no user serviceable parts. All malfunctional or damaged components are to be replaced by a service representative duly authorized by Frame Displays

INTENDED USE

1. The indented use of the Secure Display System is to display eyewear frames and sunglasses.
2. This product is for commercial use only.

www.framedisplays.com
22821 Silverbrook Center Drive, Suite 140
Sterling, VA. 20166, USA

Phone
U.S. & CANADA
1-877-274-9300

Other international+1 703-435-7770
Fax +1 703-435-3180
info@framedisplays.com

PACKAGING CONTENT

PANEL

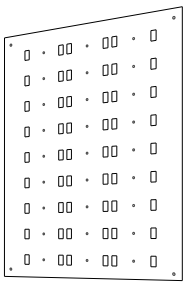

DW-31-30F

(1)

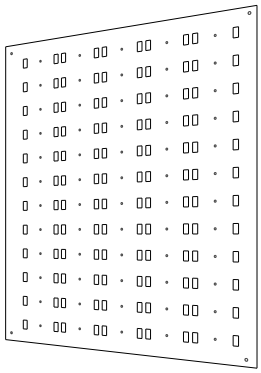

DW-31-60F

(1)

scan QR code

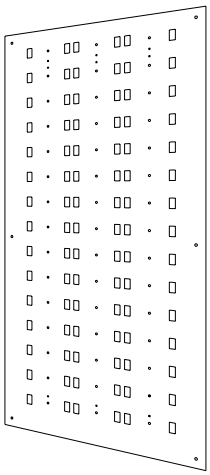

DW-31-45F

(1)

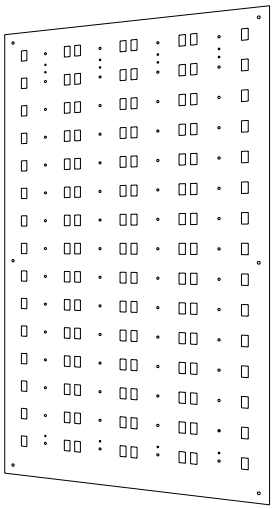

DW-31-60FH

(1)

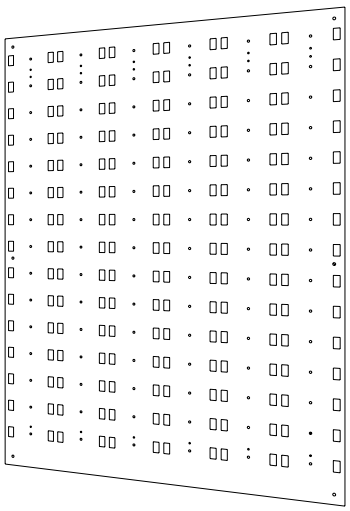

DW-31-90F

(1)

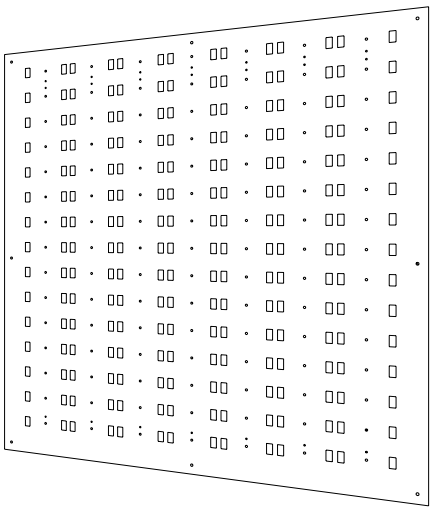

DW-31-105F

(1)

Standoff (#13.15.20.85)

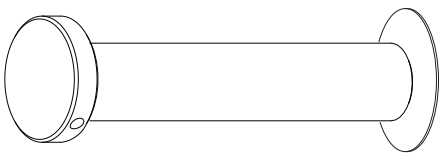

(4/4/6/6/6/8)

Butterfly Anchors + Screws

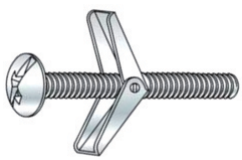

(4/4/6/6/6/8)

Pins

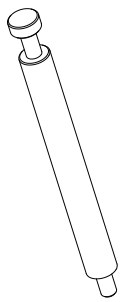

(30/60/45/60/90/105)

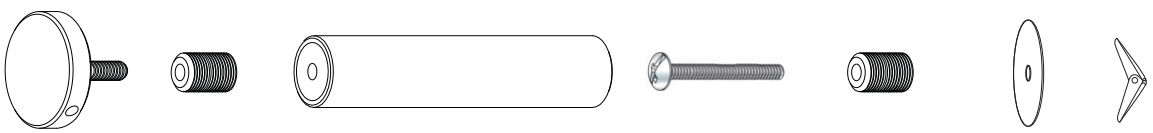

Standoff Cap
13.15.20.85-CAP

Upper Inside Threaded Barrel
13.15.20.85-BAR

Standoff Cylinder
13.15.20.85-CYL

Standoff Screw
13.15.20.85-SCR

Lower Inside Threaded Barrel
13.15.20.85-BAR

Standoff Washer
13.15.20.85-WSH

Toggle Bolt

(4/4/6/6/6/8)

REQUIRED TOOLS

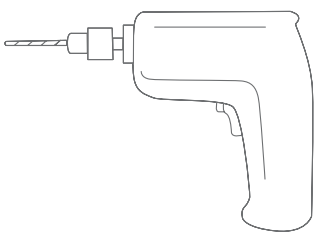



- Included

1 Install the standoffs on the marked spots on the wall

1 Place the back panel on the wall and mark standoff holes.

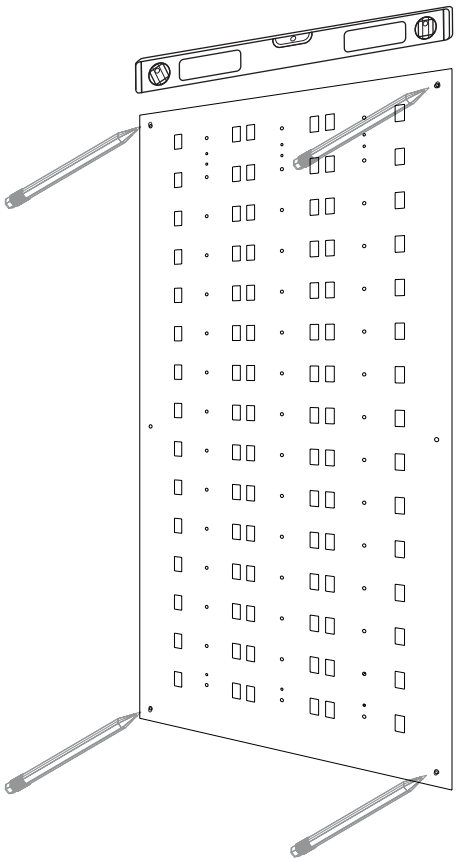

2

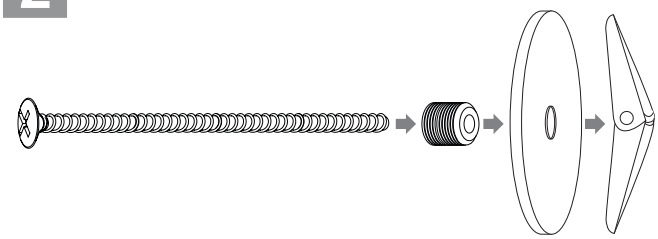

3

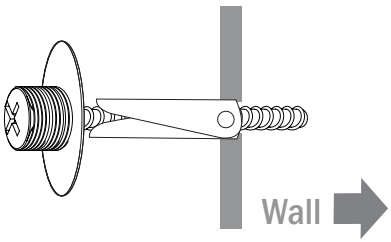

4

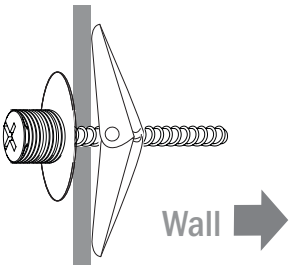

5

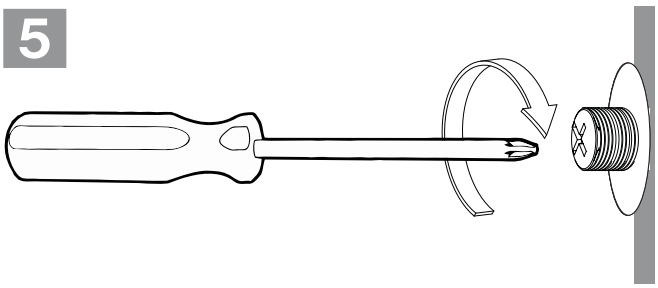

6

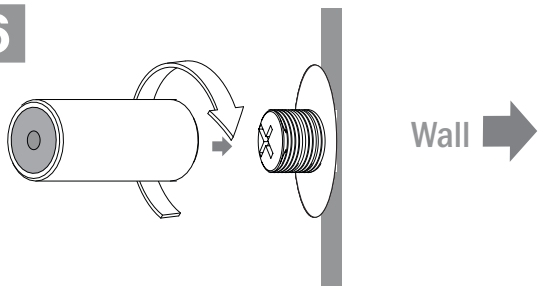

7

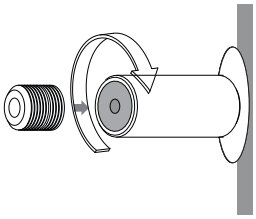

8

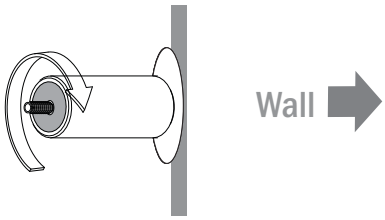

scan QR code

2 Install the pins to the panels

scan QR code

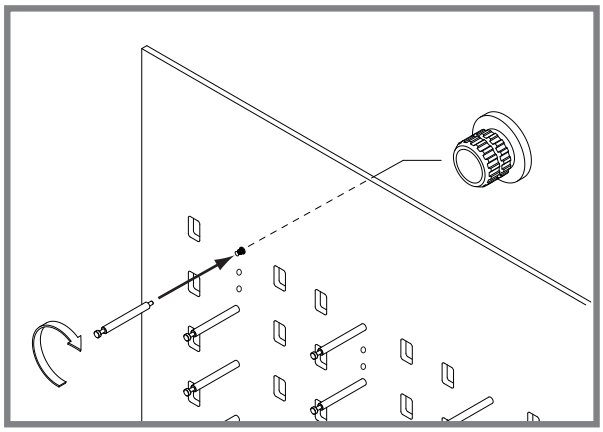

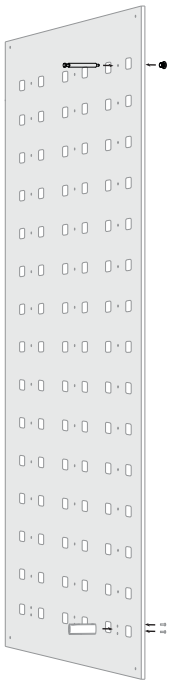

3 Place the complete panel on to the standoffs and secure them with the caps

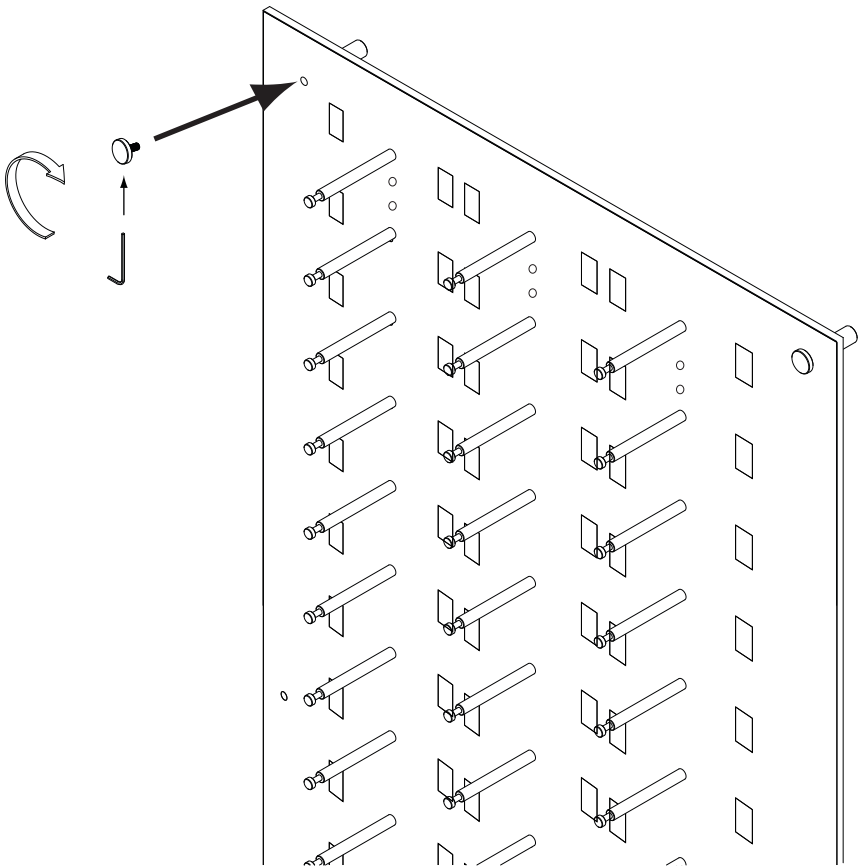

scan QR code