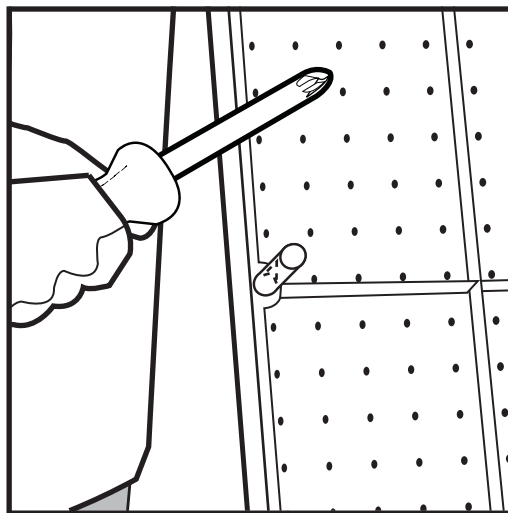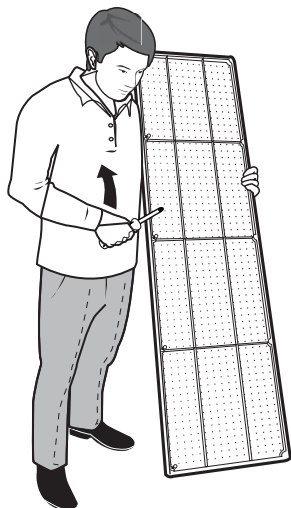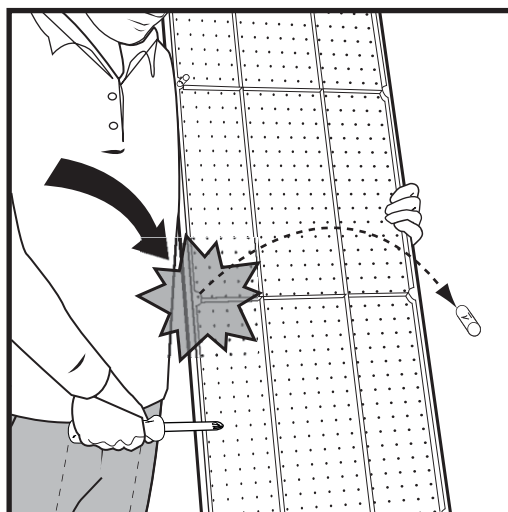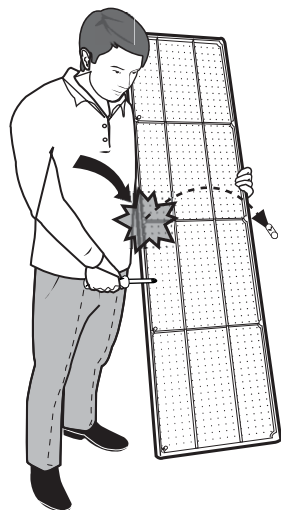Remove protruding tabs using a screwdriver or straight object by pushing into the side of the tab with some force applied.

Please Note: Tabs are in place on each panel in order to maintain a xed position during shipping.
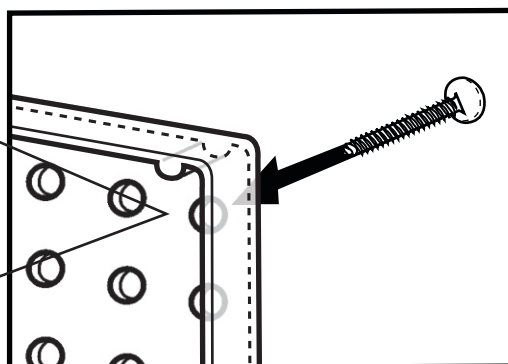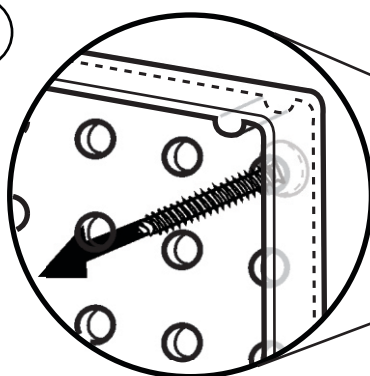
1

2

3

Use the pegboard holes as precut mounting holes.